

ASSEMBLY INSTRUCTIONS

UDMPACRIM-01DX Ultimate Diorama Masterline Pacific Rim Gipsy Danger Deluxe Version




REMOVAL INSTRUCTIONS

NOTICE

This product contains a lot of small fragile parts, which may disassemble or move during shipment. Should you notice this during assembly, we advise to carefully test up the specific element with a hairdryer (on low setting) for about 45-60 seconds from a 10 cm distance. When warm, carefully adjust the part to the correct position, and let it cool down.

本製品には輸送中に発生する破損や移動の恐れがあります。小さな部品が多いため、組み立て中に部品がずれたり、壊れたりすることがあります。組み立ての際は、ドライヤー（低温設定）を約45〜60秒、10cm程度の距離から暖め、部品が暖かくなったら、慎重に正しい位置に調整し、冷めさせてください。

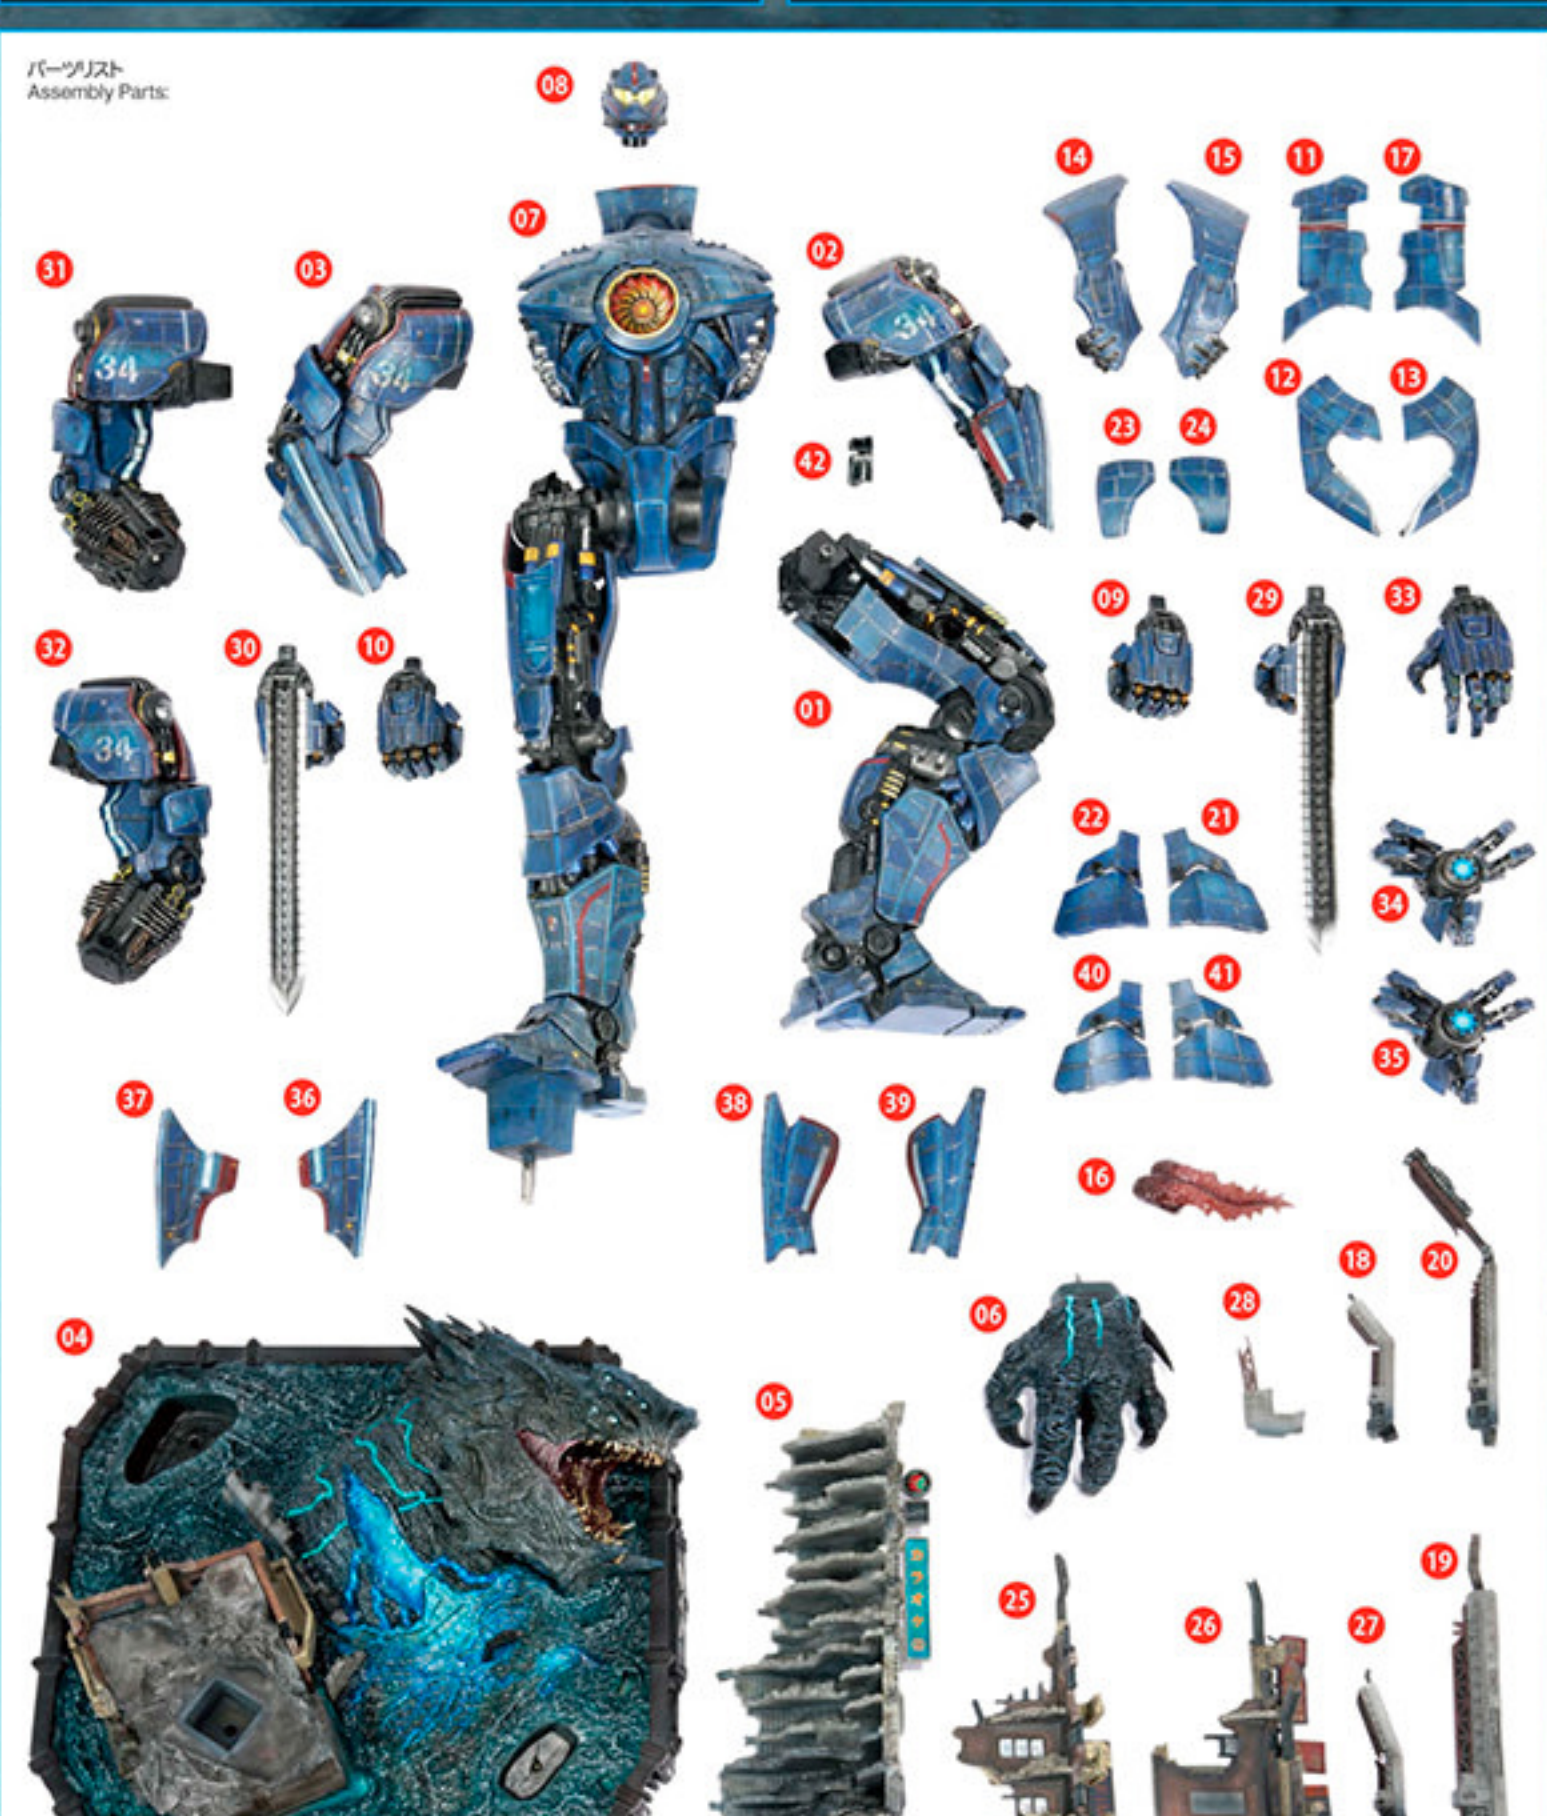

Reference are not included. Details and colors of the image might be different from ones of real product. Please be careful not to hurt yourself while assembling. When repairing or disassembling parts, please remove the parts in the reverse order. When repairing or disassembling parts, please remove the parts in the reverse order. When repairing or disassembling parts, please remove the parts in the reverse order.



Reference are not included. Details and colors of the image might be different from ones of real product. Please be careful not to hurt yourself while assembling. When repairing or disassembling parts, please remove the parts in the reverse order. When repairing or disassembling parts, please remove the parts in the reverse order. When repairing or disassembling parts, please remove the parts in the reverse order.