

ASSEMBLY INSTRUCTIONS

MMW3-02DXS Museum Masterline The Witcher 3: Wild Hunt Yennefer DX Bonus Version

THE WITCHER
WILD HUNT



Storage Reference





Parts List



NOTICE

This product contains a lot of small fragile parts, which may be damaged or lost during assembly. Should you notice this, please stop assembly immediately and contact the manufacturer for replacement. Do not use force to assemble the parts. If you are unsure about the assembly, please refer to the assembly instructions. The manufacturer is not responsible for any damage to the product or loss of parts. The manufacturer is not responsible for any damage to the product or loss of parts. The manufacturer is not responsible for any damage to the product or loss of parts.

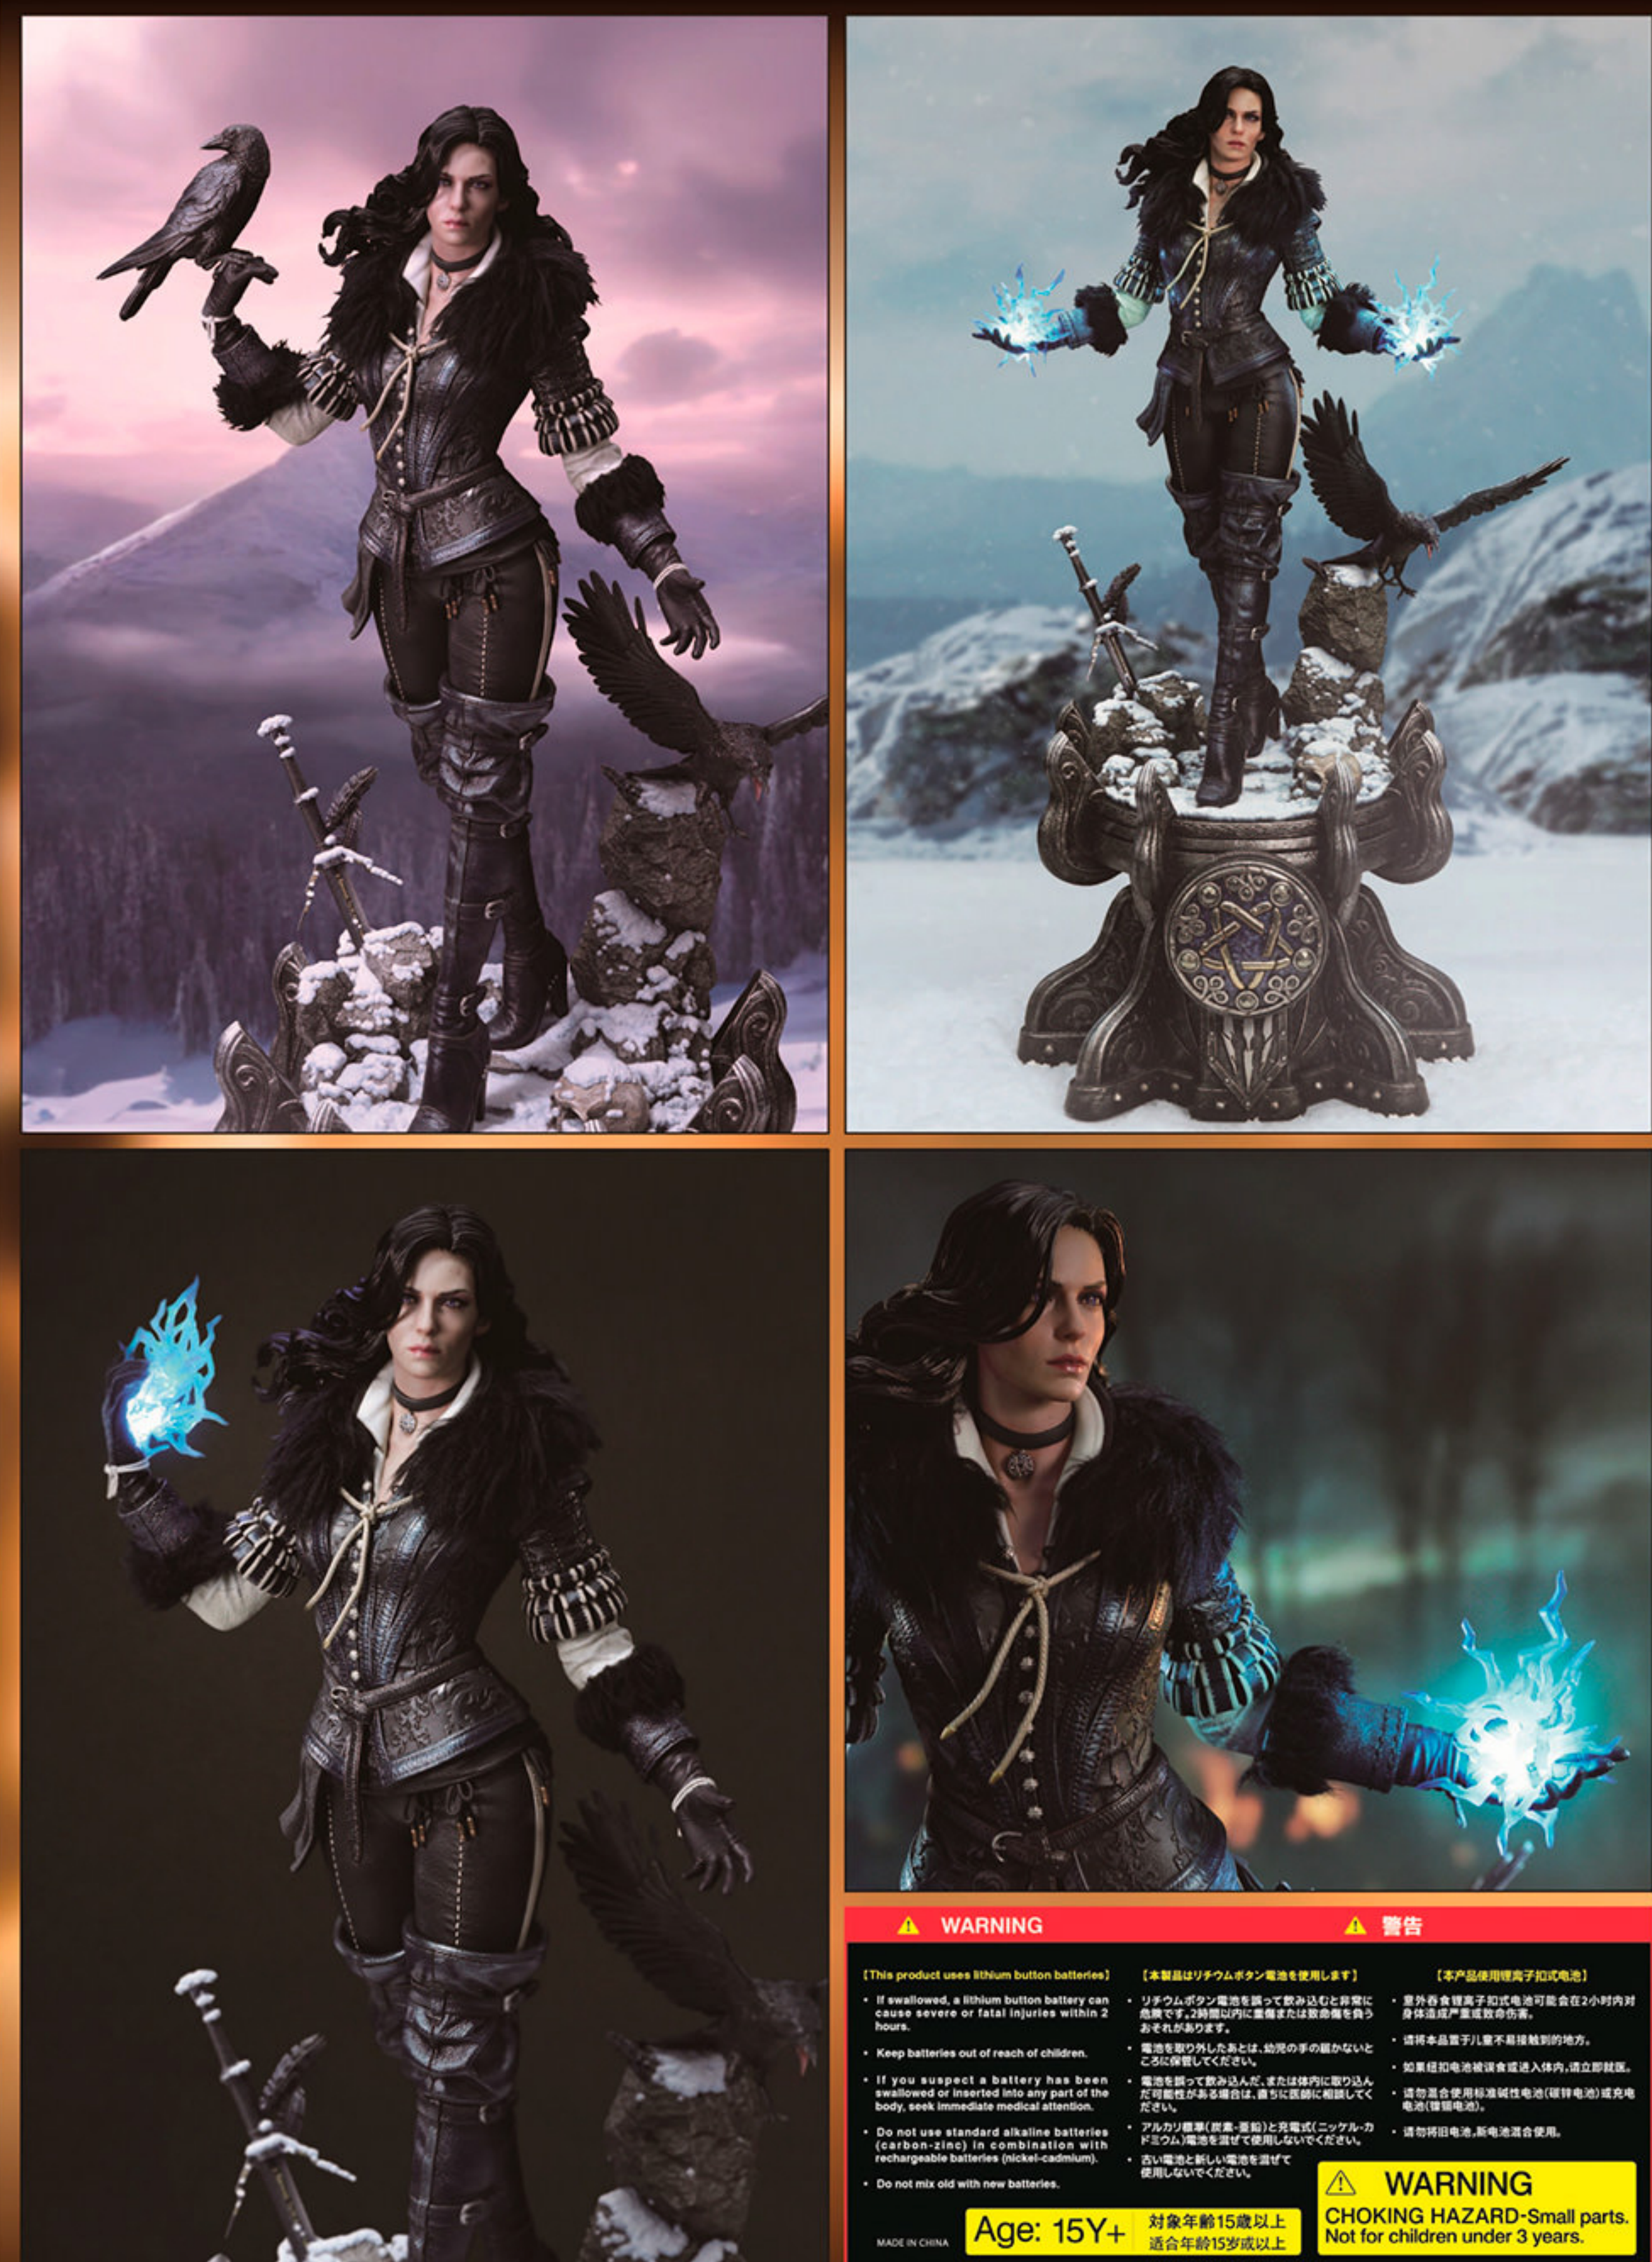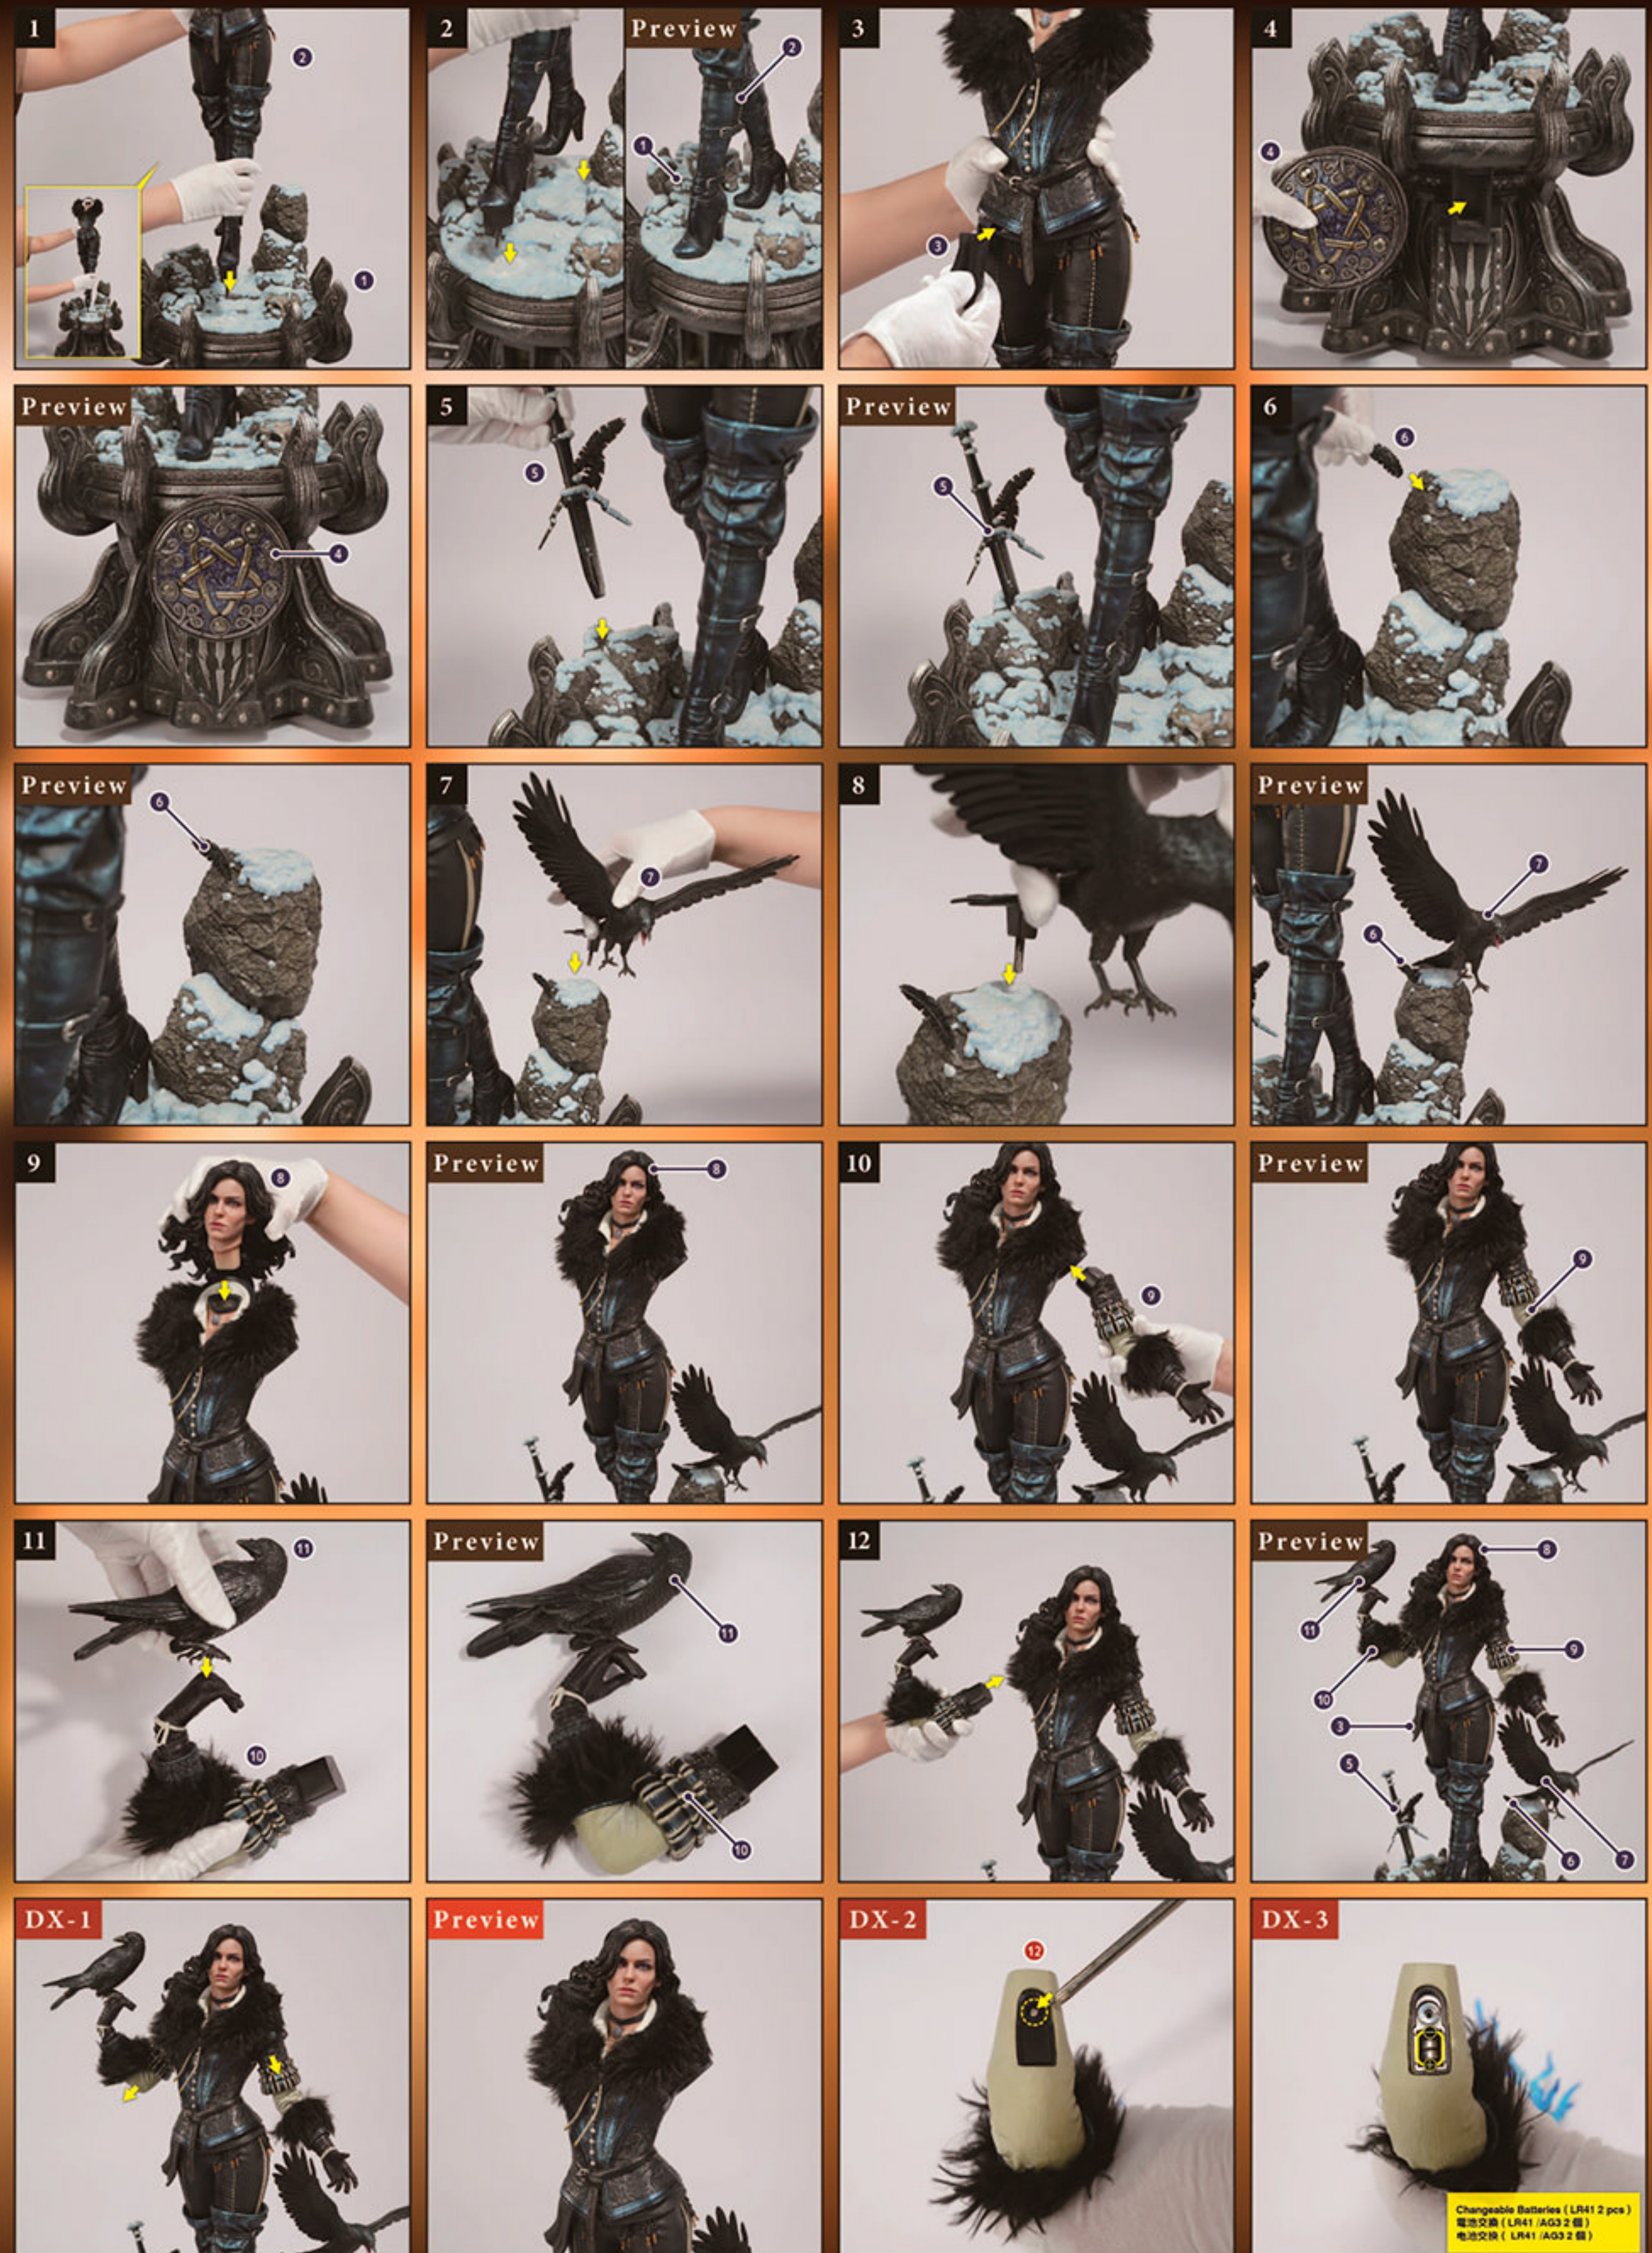

WARNING

[This product uses lithium button batteries.]

- If swallowed, a lithium button battery can cause severe or fatal injuries within 2 hours.
- Keep batteries out of reach of children.
- If you suspect a battery has been swallowed or inserted into any part of the body, seek immediate medical attention.
- Do not use standard alkaline batteries (carbon-zinc) in combination with rechargeable batteries (nickel-cadmium).
- Do not mix old with new batteries.

警告

【本製品はリチウムボタン電池を使用します】

- リチウムボタン電池が誤って飲み込まれた場合、最悪の場合2時間以内で重度の身体障害や死亡の原因となります。
- 子供の手が届かない場所に保管してください。
- もし誤って飲み込んだり、身体に電池が入り込んだりしたら、直ちに医師に相談してください。
- アルカリ（標準・普通）と充電池（ニッケル-カドミウム）の組み合わせは、火災の原因となります。
- 古い電池と新しい電池を混ぜて使用しないでください。
- 使用済みの電池、漏液電池を廃棄。

WARNING

Age: 15Y+ 対象年齢15歳以上

Choking Hazard-Small parts. Not for children under 3 years.