


C. Do not place the figure in areas with high temperature and humidity; otherwise, it will be damaged.
製品は、直射日光の当たる場所、温度差の大きい場所、高温多湿の場所などに置かないでください。変色や変形の原因となる恐れがあります。
不要把人偶摆放在高温或湿度高的环境，以免会人偶损坏。

说明书含有重要信息, 请保留, 以便将来查阅。

© 2024 Hot Toys Limited. All Rights Reserved

C. SEPARATE ROLLING EYEBALLS II / 眼球可動ギミックについて II / 可動眼球 II

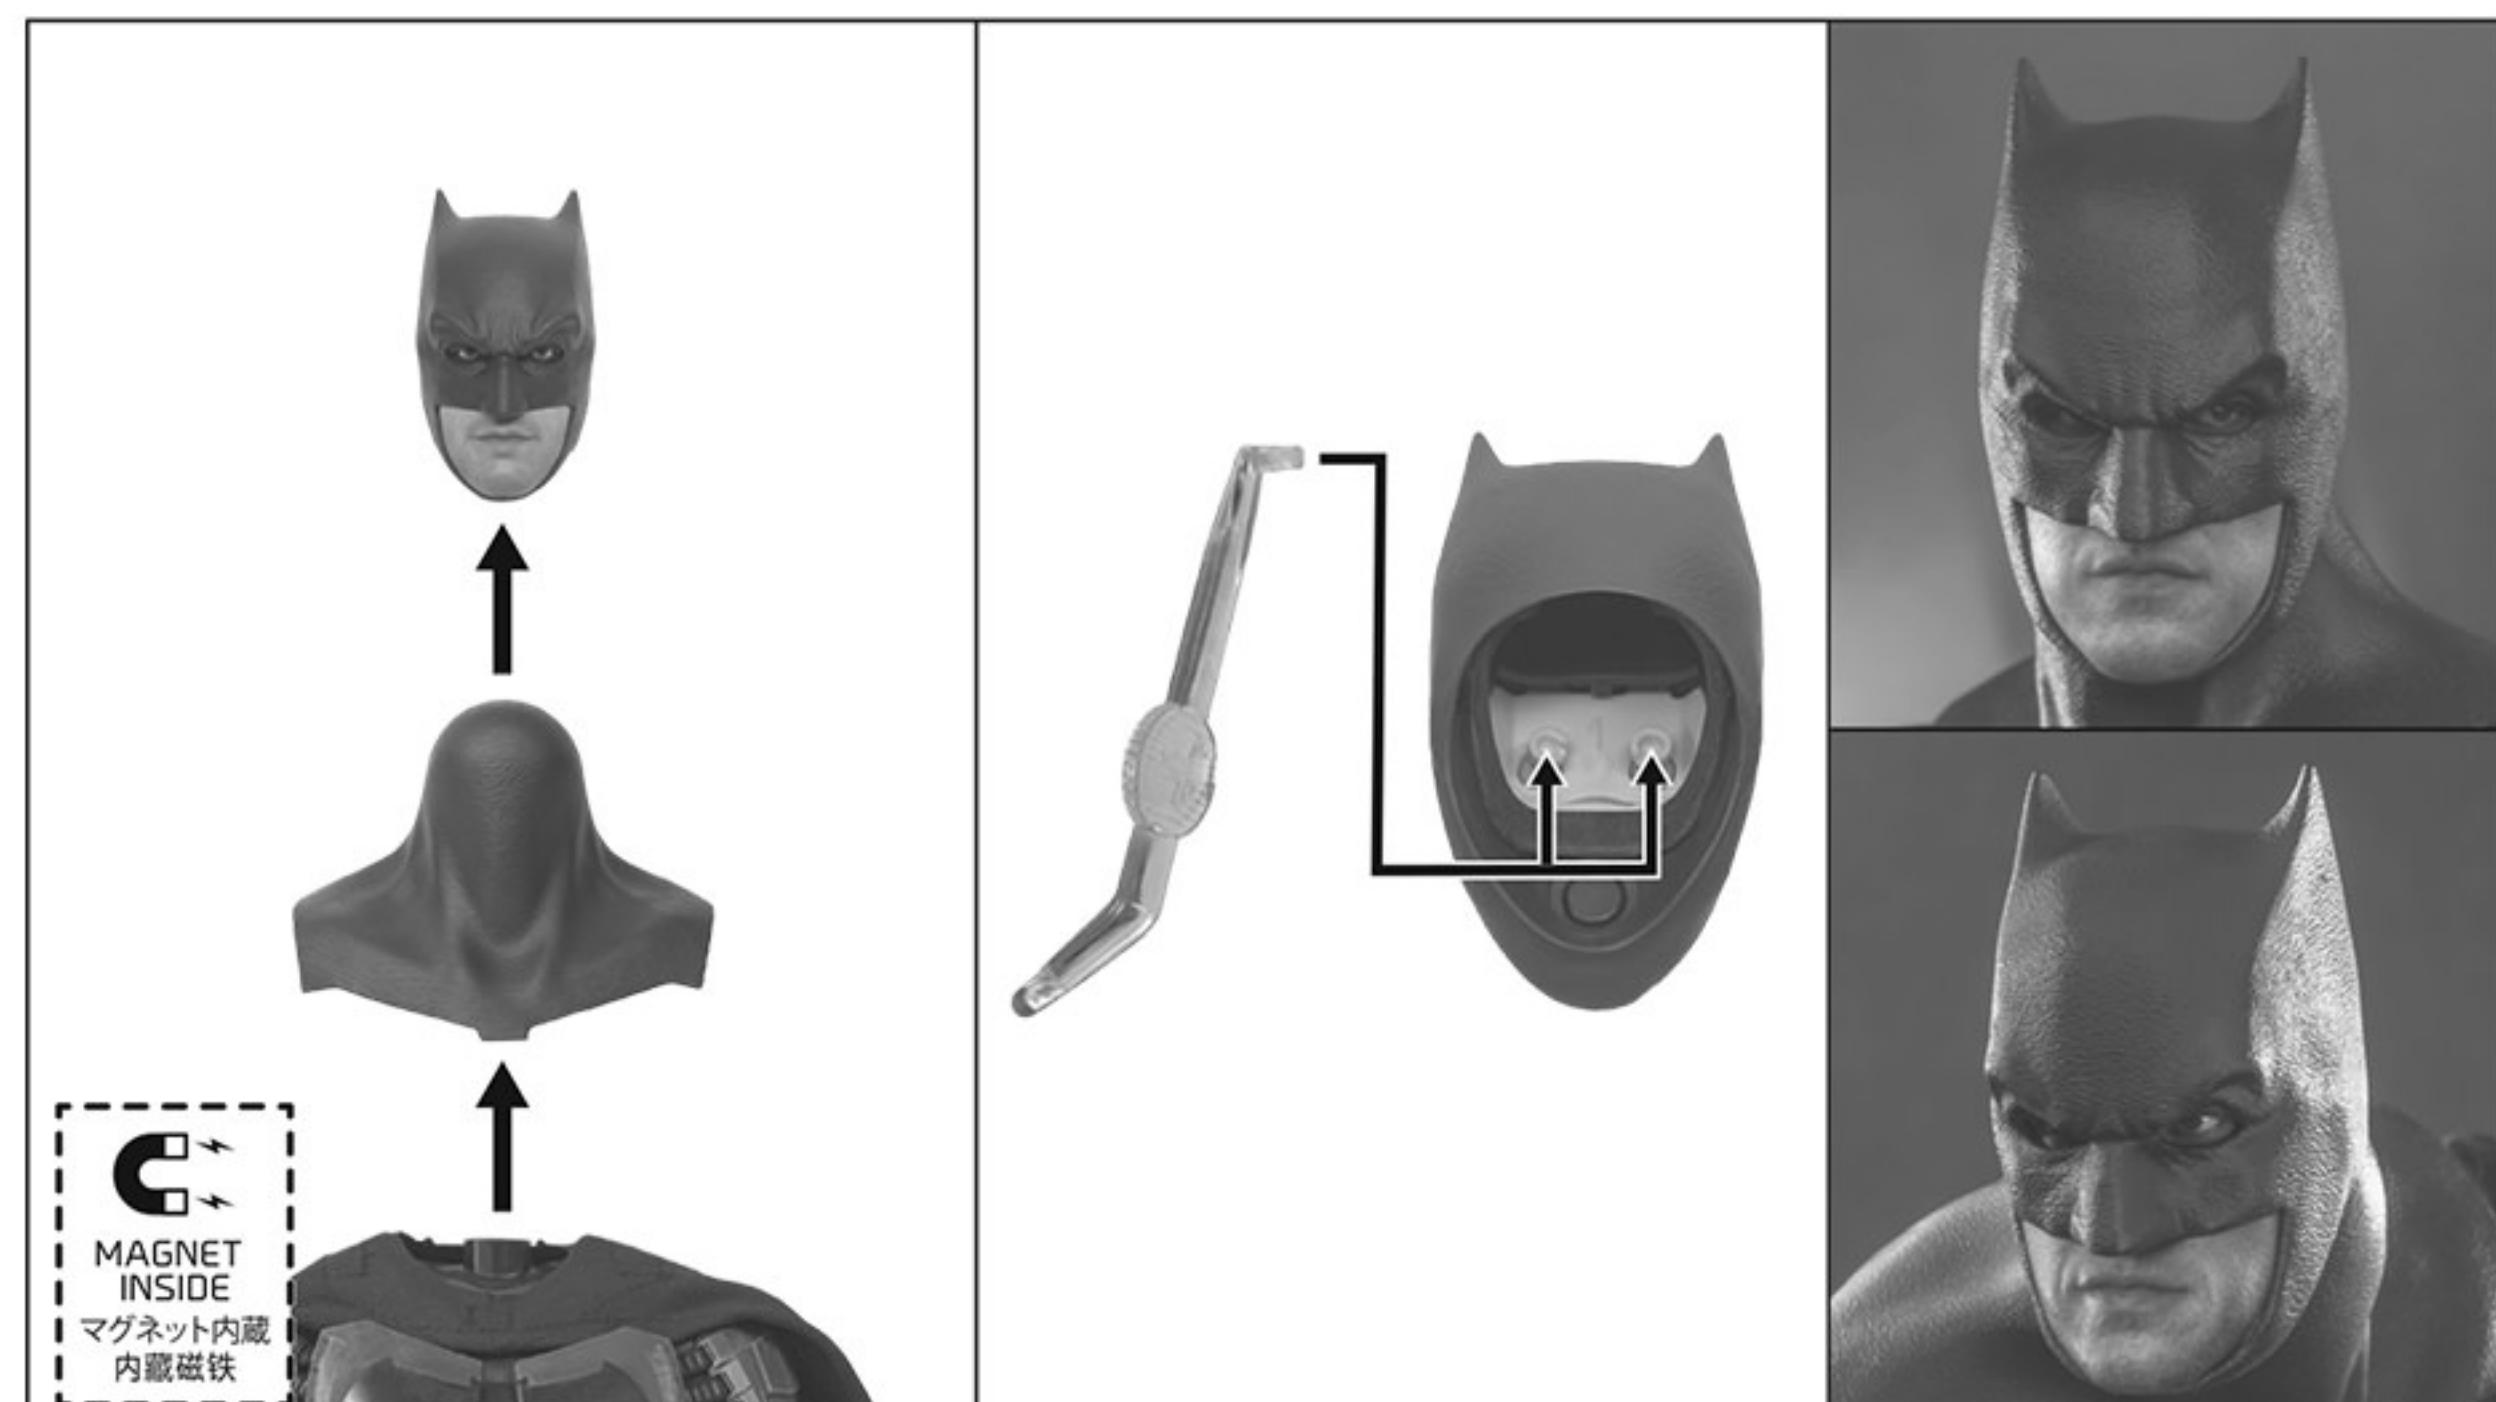

拆除头雕。眼球可以左右移动。按图示透过指定的工具独立操纵及调整眼球角度。

差し替え用フェイスパーツは、MMS731 及び MMS732『バットマン vs スーパーマン ジャスティスの誕生』バットマン(2.0版)のバットマンの

MMS731 或 MMS732 《蝙蝠侠对超人：正义曙光》蝙蝠侠 (2.0人偶的下半脸部可以安装到蝙蝠侠头盔上(本产品不包含

手臂和手肘可向图示方向及角度活动。

腿部可向图示方向及角度活动。

A black, flowing cape with white dashed lines indicating stitching or seams, set against a white background. The cape has a high collar and a wide, flared hem. The dashed lines follow the contours of the cape, including the edges and the central seam.

斗篷内藏可屈曲铁线以调整造型。

持たせてください。

type 3 USB power port on the side panel activate the light up function by toggling the on/off switch (Type 3 USB cable is not included).

将USB电源线连接至产品建议的 D.C.(5V/2A) USB 电源, 然后把电源线另一端连接至地台上的 Type C USB 电源接口。利用开关键启动发光功能。(本产品不包含TYPE C USB电源线)

键启动发光功能。(本产品不包含TYPE C USB电源线)。

画像を参考に、支柱を台座へ取り付けてください。クリップの位置は、ボーリングに合わせて画像のように調整することができます。

图示的位置非常锋利,处理时请小心。

- This product is not a toy. Collectible use only.
- D.C. to USB Power adapter is not included in this product. D.C. 5V/2A power adapter is required.
- Do not store or display the product outdoor.
- Do not expose the product in high temperature and humidity as these extremes can cause a loss of structural integrity.
- Do not get the product in touch with sharp objects or nails to avoid material damage.
- Ensure the USB cable connects to the product correctly for power supply; otherwise it will be damaged.
- The product will not be repaired if it has been tampered with, altered, modified, or reworked.
- Do not rub or wipe the product with thinner, benzene, alcohol or any corrosive materials which could damage the product.
- When cleaning, wipe with a damp cloth first and dry with a clean, soft cloth.
- Regularly check the USB power cable, plug housing and other components for damage; In the event of such damage, do not connect the product and transformer until the damage is repaired.
- Adult assembly is required.
- Do not connect to more than one power supply where such connection is possible without the aid of two or breaking the product..
- USB cable is not to be inserted into socket outlets.
- The product shall only be used with a D.C. to USB Power adapter.
- The product liable to be cleaned with liquid is to be disconnected from transformer before cleaning.
- The product is not intended for children under 3 years old.
- The transformer is not a toy.

Please keep this instruction sheet for future reference, since it contains important information.

製品に関するご注意

- ・ 本製品は玩具ではありません。展示品としてご使用ください。
- ・ 本製品に電源アダプターは付属しません。本製品は電源アダプター(DC 5V/2A)に対応しております。
- ・ 本製品は屋内専用です。屋外では使用しないでください。
- ・ 製品は、直射日光の当たる場所、温度差の大きい場所、高温多湿の場所などに置かないでください。変色や変形の原因となる恐れがあります。
- ・ 本製品を強く叩いたり、爪や鋭利なものでも触れないでください。破損や変形・劣化につながる恐れがあります。
- ・ ご使用前に必ず充電ケーブルが正しく接続されていることを確認してからスイッチを入れてください。正しく接続されないで充電器で充電すると、ライトアップ機能の破損や予め知らぬ事につながる恐れがあります。
- ・ 本製品の故障、改造・修理に関するお問い合わせください。取扱説明書の記載内容を守ることにより生じた故障または損傷については、(株)ホトイズジャパンは一切の責任を負いませんのであらかじめご了承ください。
- ・ ペンギンやシロフネ、アルーノードと特許性の高い液体を使用すると、変色や変形の原因となりますので絶対に使用しないでください。
- ・ 本製品の清掃をする時は、柔らかい布で乾拭きするか、水で濡らしてから固く絞った柔らかい布で拭いてください。水拭きした後は、必ず乾拭きしてください。
- ・ 本製品は充電ケーブルやプラグ、電源アダプターなどは定期的に状態確認をしてください。これらのいずれかに損傷など不具合がある場合は、本製品を接続しないでください。
- ・ 組み立てに関する作業は大人が行なってください。
- ・ 製品を複数の電源・電源アダプターへ接続しないでください。
- ・ USBケーブルをコンセントに差し込まないでください。
- ・ 本製品に電池もご使用いただけます。電源アダプター(DC 5V/2A)のみご使用いただけます。
- ・ 本製品の清掃をする時は、必ず電源アダプターを抜いてください。
- ・ 小さなバーコード讀取りと息留めなどの危険がありますので、3才以下のお子様には絶対に製品を与えないでください。
- ・ 製品及び本製品に使用する電源機器は玩具ではありません。
- ・ 変圧器や電源アダプターを誤用すると感電する恐れがあります。

- ・ 変圧器や電源アダプターは、必ず指定の規格のものをご使用ください。

※ 取扱説明書の記載内容を守らないことにより生じた故障または損害について、(株)ホ

- 本产品非玩具。本产品只属收藏品。
- 本产品不包含D.C.转USB电源适配器。需使用D.C. 5V/ 2A电源适配器。
- 本产品不适合于户外展示或存放。
- 不要把本产品摆放在高温或湿度高的环境,以免令产品结构受损。
- 请避免尖锐物品及指甲与本产品有任何接触,以免损坏产品涂层。
- USB电源线必须完全接好本产品插口后才能正常通电,否则会令产品损坏。
- 如自行作任何表面或电子相关的改装而引起产品结构损坏,本公司将不负责任修理处理。
- 不要用稀释剂,苯,酒精或任何可能损坏产品的腐蚀性物质擦拭,否则产品会损坏。
- 生此类损坏,在修复损坏前,不得连接产品 & 变压器。
- 本产品该由成人组装。
- 本产品不得连接超过一个电源。
- USB电源线不能插入插座。
- 本产品只能与D.C.转USB电源适配器一起使用。
- 使用液体清洁本产品前,应与变压器断开。
- 本产品不适合三岁以下儿童使用。
- 变压器非玩具。
- 不当使用变压器可引致触电。
- 该模型只能与玩具变压器一起使用。
- 模型只能使用推荐的变压器,变压器不是模型。

重要: 若有以上情况发生,本公司将不负责修理或退货。

重要：若有以上情况发生，本公司将不负责
修理处理或更换。
说明书含有重要信息，请保留，以便将来
查阅。