

ASSEMBLY INSTRUCTIONS

UJMPACRIM-01 Ultimate Diorama Masterline Pacific Rim Gipsy Danger


NOTICE

This product contains a lot of small fragile parts, which may dislocate or move during shipment. Should you notice this during assembly, we advise to carefully heat up the specific element with a hairdryer for low settings for about 45-60 seconds from a 10 cm distance. When warm, carefully adjust the part to the correct position, and let it cool down.

本製品には輸送中に移動する可能性がある、小さな部品が多量に含まれています。組み立て中に特定の部品が欠けた場合には、ドライヤーを低温で暖め、約45-60秒の間、約10cmの距離から暖め、部品が正しい位置に移動するまで調整してください。暖かくなったら、部品が正しい位置に移動するまで調整してください。暖かくなったら、部品が正しい位置に移動するまで調整してください。



REMOVAL INSTRUCTIONS

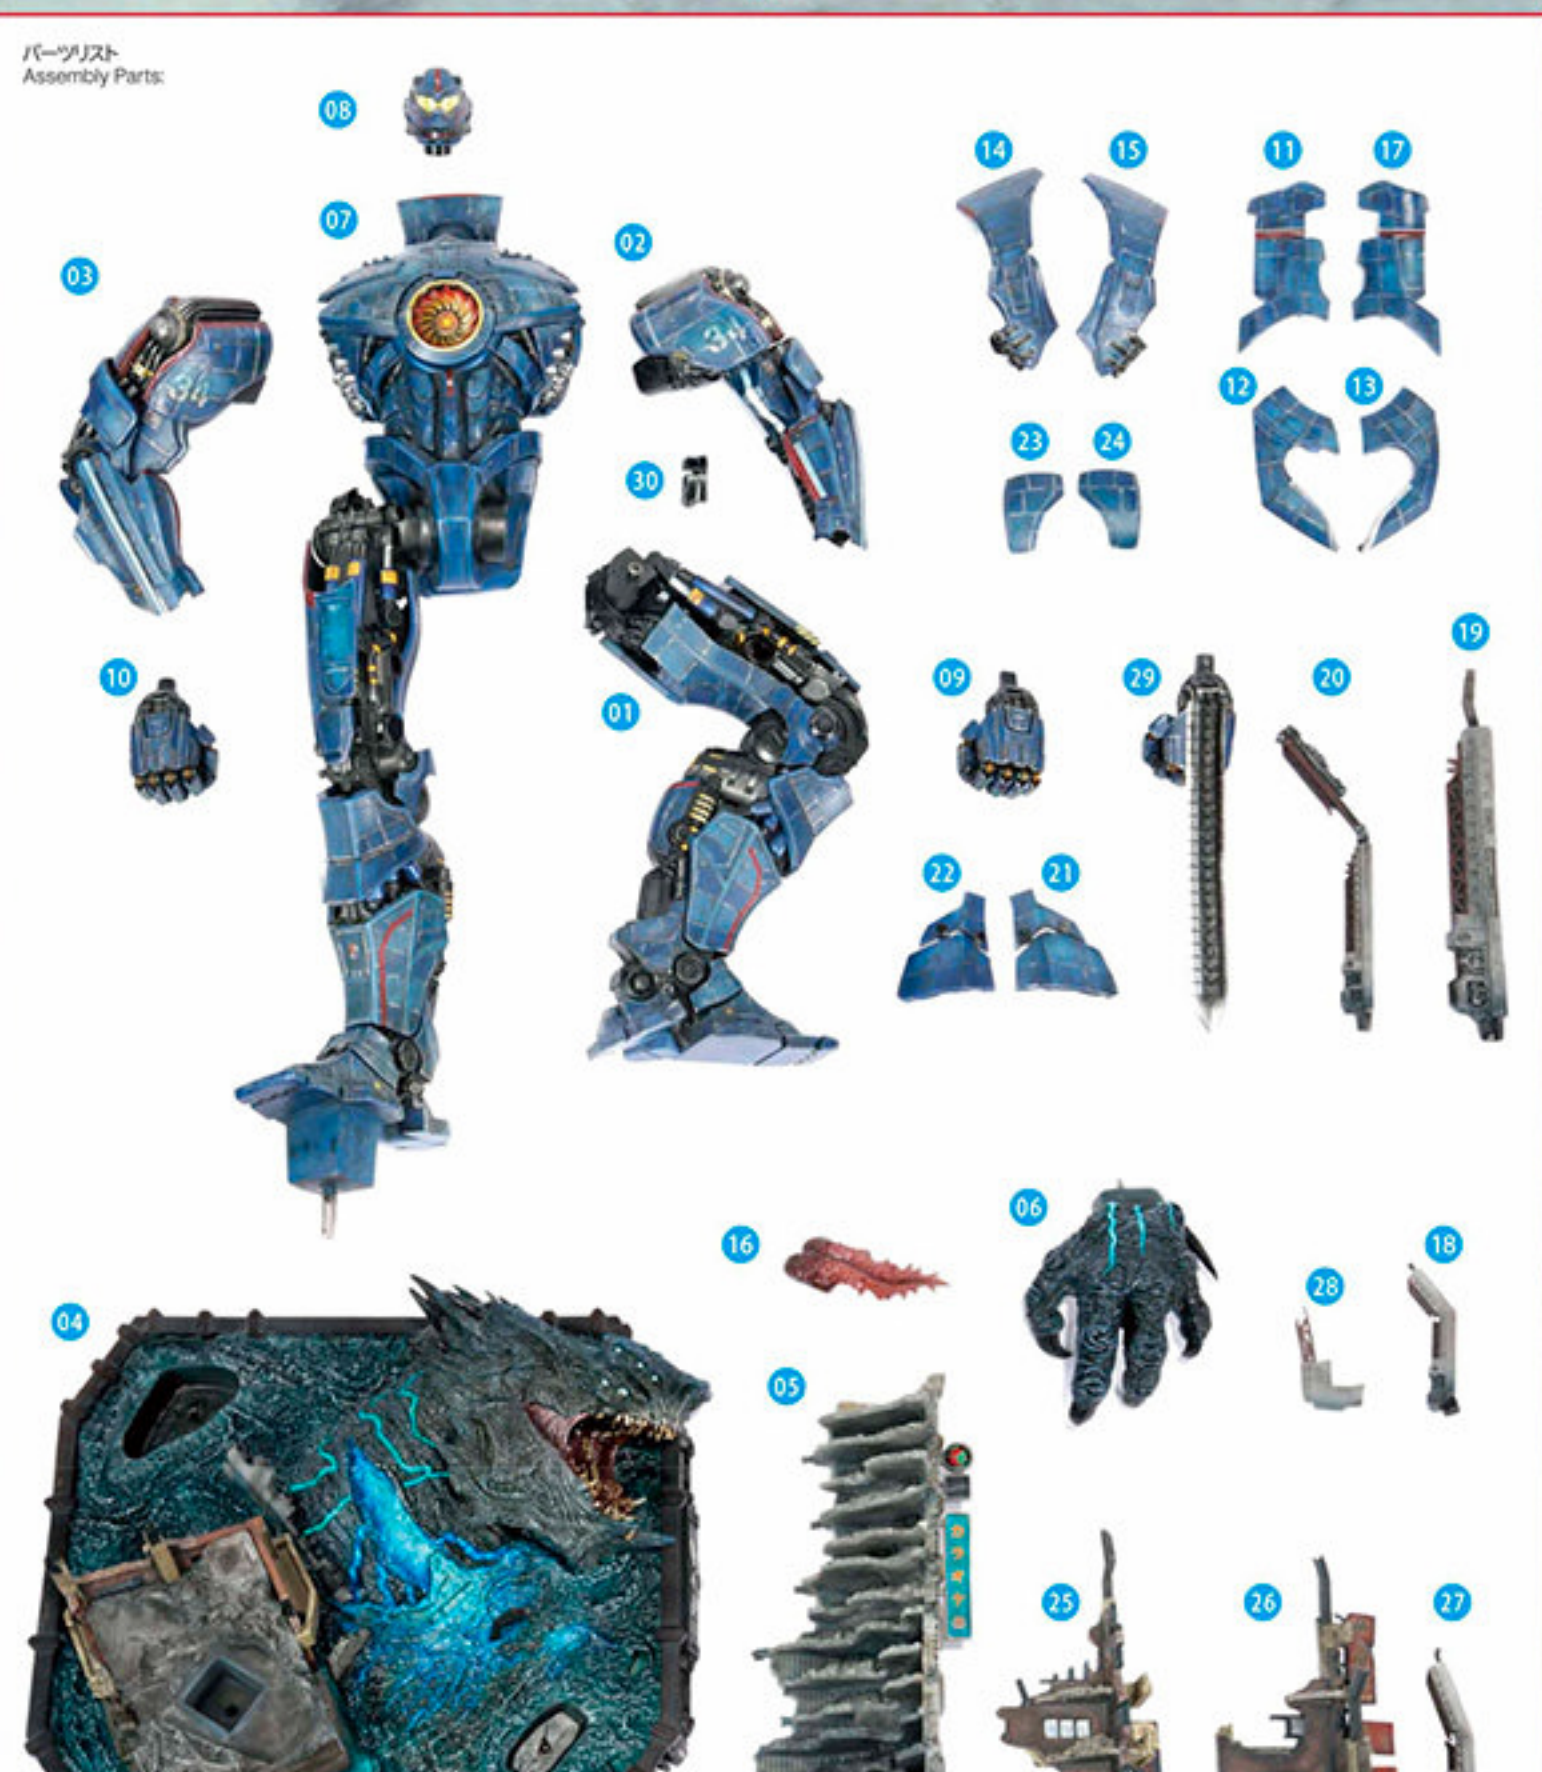

<https://www.primestudio.com/>
<https://www.facebook.com/PrimeStudio>
<https://www.instagram.com/PrimeStudio>
<https://twitter.com/PrimeStudio>



<https://www.primestudio.com/>
<https://www.facebook.com/PrimeStudio>
<https://www.instagram.com/PrimeStudio>
<https://twitter.com/PrimeStudio>

LED Light ON/OFF Switch

This product does not come with a USB AC adapter (OUTPUT 5V 1A) or USB Type-C cable (Type C). Please prepare separately.
本製品には電源アダプター（出力：5V 1A）またはUSB Type-Cケーブル（Type C）は付属していません。別途準備してください。
本产品不附带USB电源AC适配器（输出：OUTPUT 5V 1A）或USB Type-C线（Type C），请自行准备。



<https://www.primestudio.com/>
<https://www.facebook.com/PrimeStudio>
<https://www.instagram.com/PrimeStudio>
<https://twitter.com/PrimeStudio>

LED Light ON/OFF Switch

This product does not come with a USB AC adapter (OUTPUT 5V 1A) or USB Type-C cable (Type C). Please prepare separately.
本製品には電源アダプター（出力：5V 1A）またはUSB Type-Cケーブル（Type C）は付属していません。別途準備してください。
本产品不附带USB电源AC适配器（输出：OUTPUT 5V 1A）或USB Type-C线（Type C），请自行准备。

PACIFIC RIM